

CASCADE FIRE EQUIPMENT COMPANY


SHROUD INSTRUCTIONS

Please read all instructions prior to attaching to helmet.
If you need further assistance, please contact us.

50016 Standard Shroud & 50013 Deluxe Shroud Donning/Doffing instructions:

a) Lay Shroud flat with the interior of the Shroud (label side) facing you.

b) If not factory installed, attach the included self-adhesive hook strips to the helmet interior. Begin with the back center strip, and then align the left and right side strips on the inside of the helmet to match the Shroud (approximately 4" from the front center).

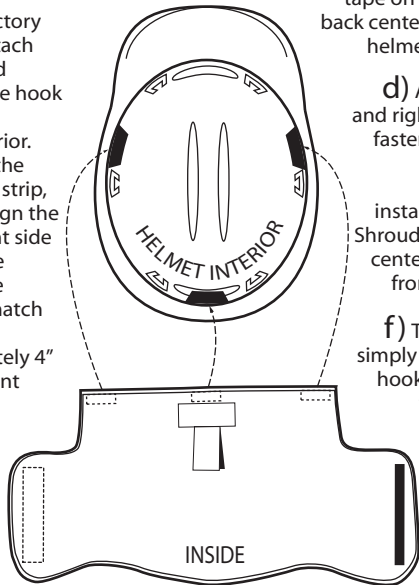


c) Attach center piece of fastening tape on Shroud to back center piece on helmet interior.

d) Attach left and right sides of fastening tape.

e) Once installed, verify Shroud closure is centered at the front of face.

f) To remove, simply pull apart hook and loop fasteners.

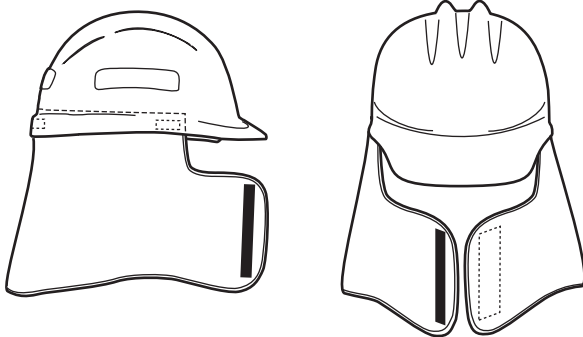

Please read all instructions prior to attaching to helmet.
If you need further assistance, please contact us.

50030 Super Shroud Donning/Doffing instructions:

a) Lay Shroud flat with the interior of the Shroud (label side) facing you.

b) Align back of helmet with the center (label) of the Shroud.

c) Connect attachment strips to the helmet suspension by threading strips between helmet and suspension, then folding over to fasten.

d) Adjust Shroud to desired fit around helmet, making sure the closure is offset to the right of the center of your face.

e) To remove, simply pull apart hook and loop fasteners.

